
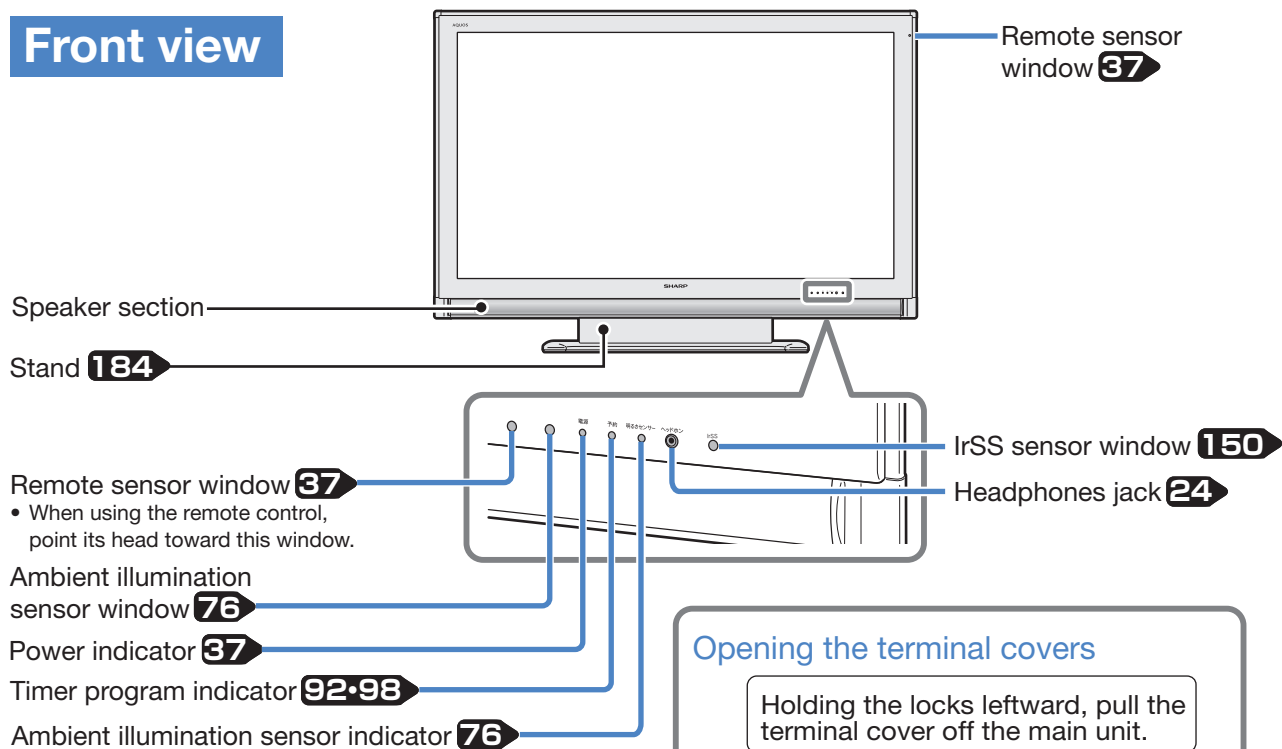



■ The number shown in each  is the page number where the part's function and/or use are explained in Japanese.

Front view




Opening the terminal covers

Holding the locks leftward, pull the terminal cover off the main unit.

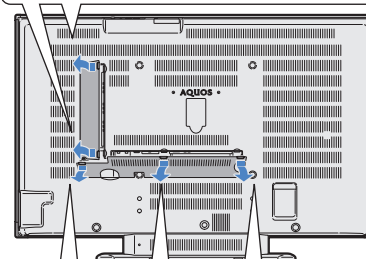


Holding the locks downward, pull the terminal cover off the main unit.

Top view

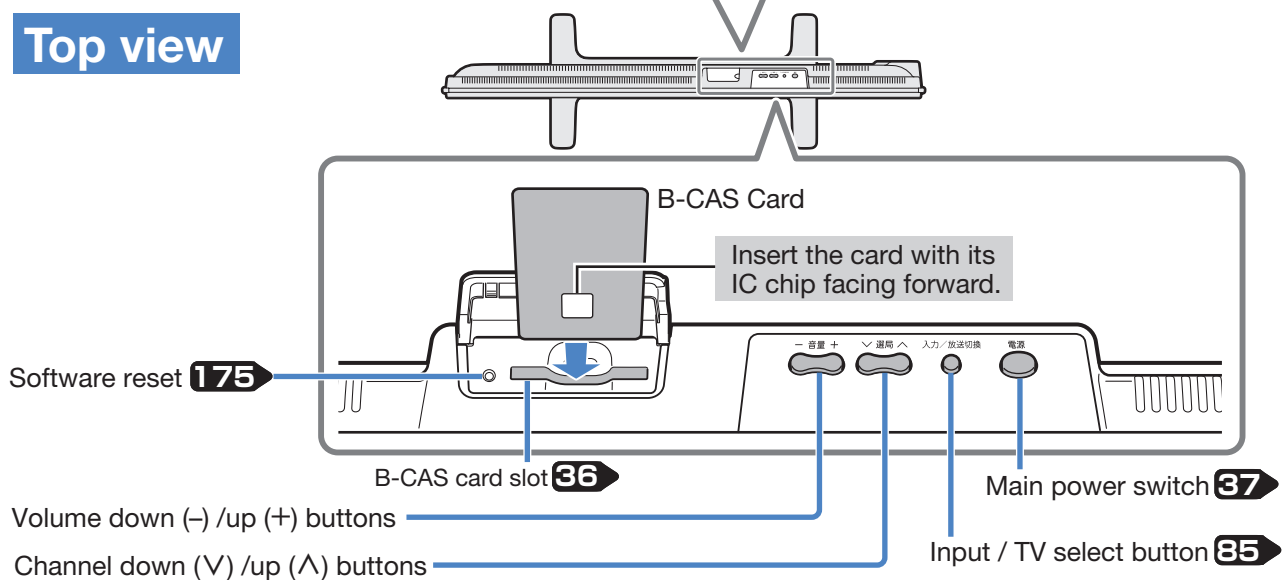

Back view

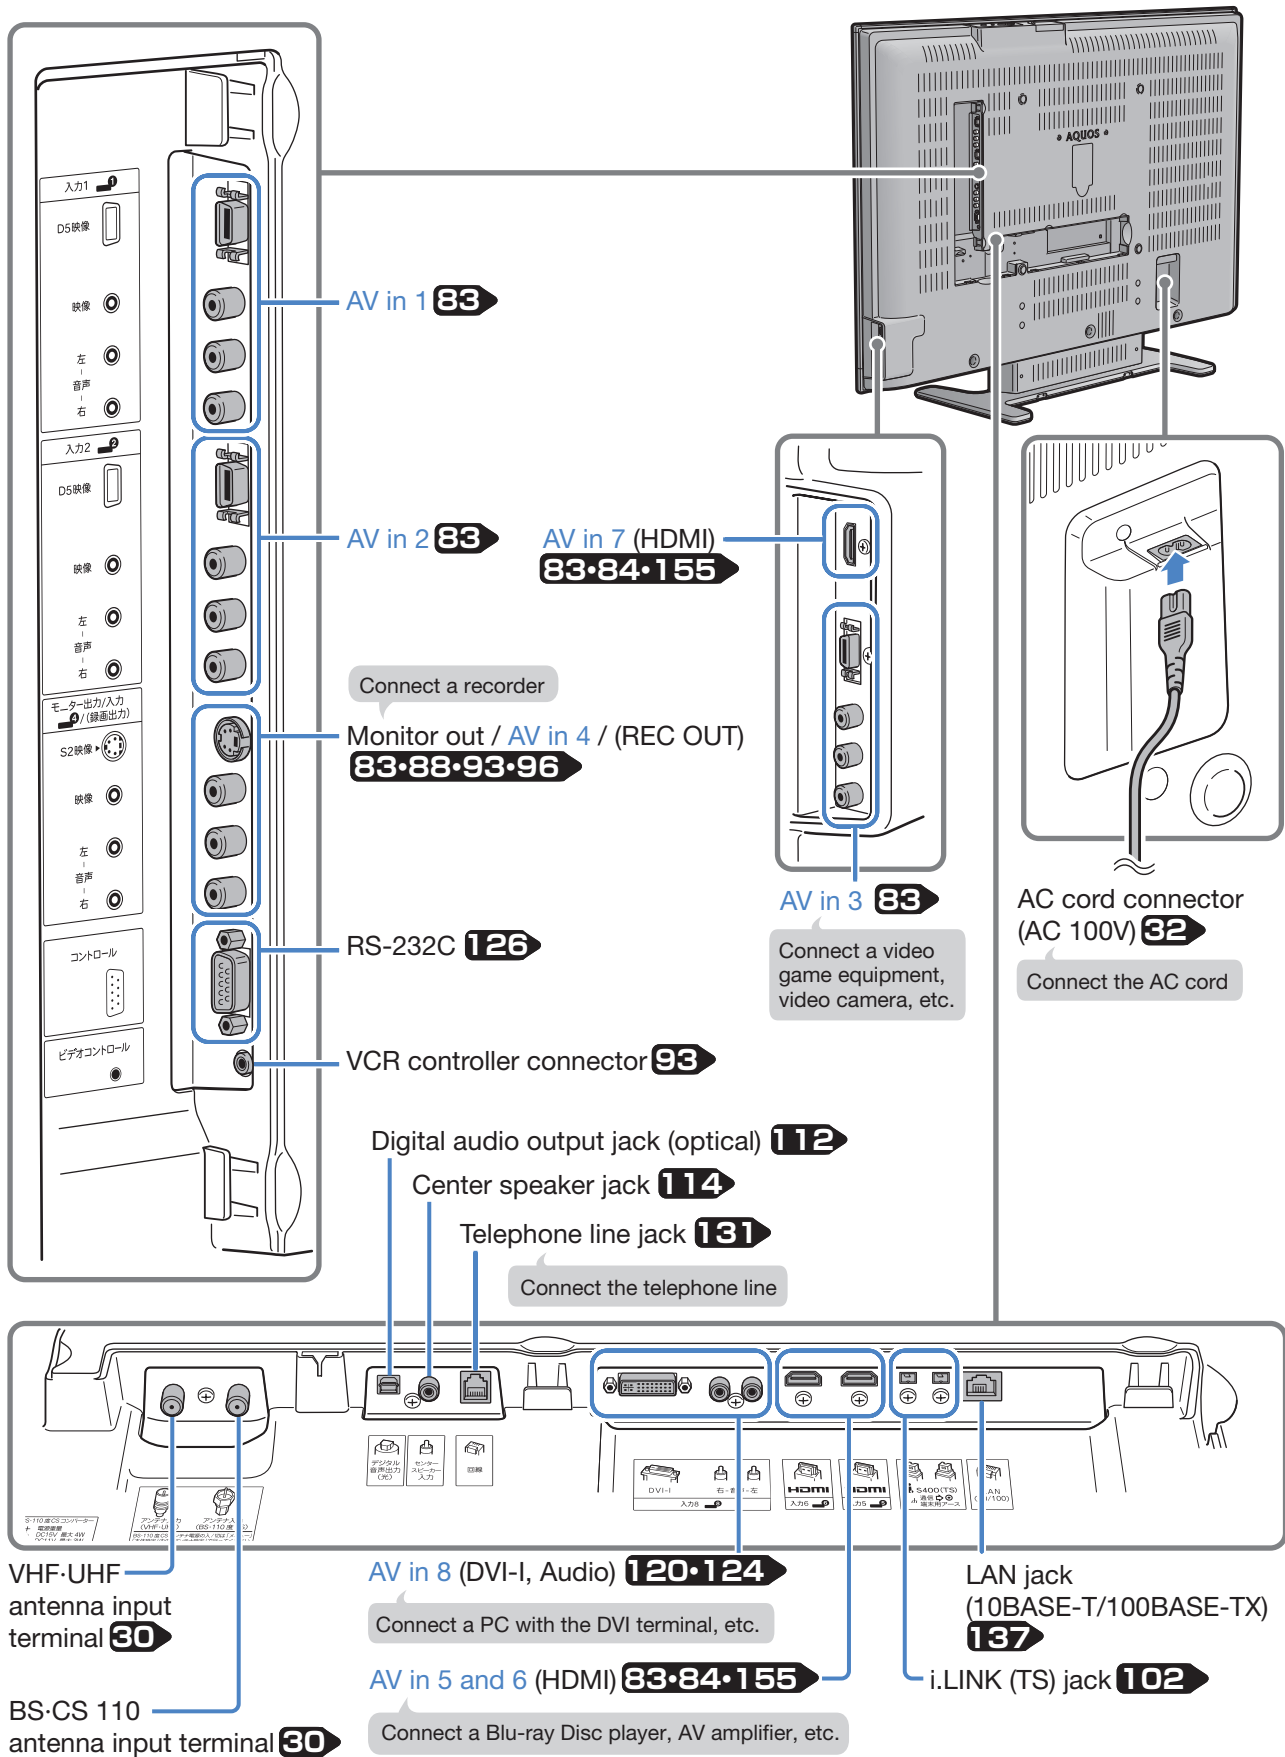

Part Names – Remote Control Unit

Active/Standby **37**

Press to engage the TV set in the active or standby mode.

Display **58**

Press to display or turn off the channel call, etc.

Familink **154**

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

Terrestrial analog select **58**

Terrestrial digital select **58**

BS select **58**

CS select **58**

Select the CS digital channel for the first time. **35**

@ (linked data broadcast) **70**

Press to call the data broadcast linked with the current digital TV program.

Volume up (+)/down (–)

Press to adjust the volume.

Mute

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

Program info **70**

Press to display detailed information on the current digital program.

EPG **62**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

Other on-air programs **62**

Press to display the EPG for currently on-air programs only (裏番組).

Finish **38**

Press to finish menu operation, etc.

* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

Screen mode **72**

Press to select the desired screen mode.

AV mode select **74**

Press to select the picture/sound setting that best matches the current program.

Freeze **69**

Press to freeze the picture.

i.LINK **104**

Press to display the i.LINK control panel.

Favorite channel select/register **59**

Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

Familink **154**

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

AQUOS.jp **140**

Press to connect to the internet.

LCD display window **58**

CATV **59**

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

Digital channel number input **59**

Use to select a digital channel by entering the 3-digit channel number.

Channel select **58**

- Press to select a channel.
- Use to input a number for various settings.

Channel up (^)/down (v) **58**

Press to select channels in the current network, media and CATV channels in the ascending or descending order.

* CATV channels are factory set to be skipped.

Media select **58**

Press to select the desired media (TV, radio, or data).

Input select **85**

Press to select the desired input.

Menu **38**

Press to display or turn off the menu screen.

*The menus can be displayed in English. See **195** for instructions on how to switch the display language.*

Cursor (up, down, left, right) **38**

Use to select a menu item, column, etc.

Enter/Confirm **38**

Press to confirm a selected setting or menu item.

Return **38**

Press to go back to the previous screen.

Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

Color **64 • 65 • 70**

Use to operate EPGs and data program screens.

Picture select **67**

Press to select the desired picture when watching a digital multi-picture program.

Caption **67**

Press to display, select, or turn off captions when watching a digital program with captions.

Audio select **66 • 67**

Press to select the desired audio.

Split screen **68**


Press to switch between the split screen mode and the normal screen mode.

Operable screen **68**

Press to switch the operable screen when the TV set is in the split screen mode.

To open the cover

Hold the cover by the projections on both sides and lift upwards.

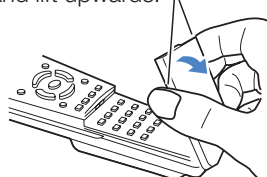

Switching the Display Language to English メニューなどの言語を英語にする

■ Using the menu screen, you can switch the on-screen display language to English.

メニューなどの画面表示を英語にすることができます。



★ おしらせ

誤ってメニューを英語にしてしまったときは

- メニューから「Setup」－「言語設定 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

- Press**
メニュー

1 Display the menu screen.
メニューを表示する
- 決定**

2 Select “ 本体設定 ”(Setup) — “Language (言語設定)”.

「本体設定」－「Language (言語設定)」を選ぶ

決定 Enter.
決定する
- 決定**

3 Select “English”.

「English」を選ぶ

決定 Enter.
決定する

 - The menu screen is now displayed in English.
画面表示が英語になります。
- 決定**

4 Finish this operation.
終了する